

FIRST LIGHT
USA



LIBERATOR™

USER MANUAL

TABLE OF CONTENTS

Specifications 1

Battery Installation 3

Components 4

Basic Functions 5

 Lockout/Ready Mode..... 8

 Momentary Mode..... 8

 Constant-On 9

 Cycle Control 9

 Task Light.....9



 Strobe Mode.....10



 Low Battery.....10

Lifetime Limited Warranty11

FIRST-LIGHT USA, LLC
205 S. Main Street, Seymour, IL 61875
Phone: 877.454.4450 | Fax: 877.454.4420
Email: info@firstlight-usa.com
www.firstlight-usa.com

SPECIFICATIONS

FL1 STANDARD	MAX	HIGH	MEDIUM	LOW
	500 LUMENS	175 LUMENS	50 LUMENS	5 LUMENS
	2h	4h	16h	60h

FL1 STANDARD	
	1m
	3m

Batteries

- (2) CR123 3-Volt Lithium Batteries, ANSI: 5018LC, IEC: CR17345

Environmental Specifications

- Normal Operating Temperatures: (-20°F) to 120°F
- Waterproof

Thank you for purchasing the First-Light USA LIBERATOR™ Light. Please carefully review this manual prior to use.



IMPORTANT – PLEASE READ FIRST

The intense white light emitted by the primary white LED may cause temporary blinding, regardless of the brightness level used. Use caution during operation. Do not point light directly into eyes at any distance. Not for use by children.



LITHIUM BATTERY WARNING

Lithium batteries can be dangerous if used improperly. Never disassemble, short circuit, recharge, or expose to water, fire, or high temperatures. Never use batteries of different ages, capacities, or brands together. Store separately and properly dispose of batteries after use. Keep away from children.

NOTE: High quality, rechargeable CR123 batteries may be used to power the Freehand Light. The user should identify the voltage capacity of any rechargeable batteries prior to installing them into the Freehand Light.



IMPORTANT: Never install any rechargeable CR123 batteries that exceed a combined voltage of 10 volts as this will damage the internal circuitry and void the warranty.

REPLACEMENT PARTS

To order replacement parts, please call 877.454.4450 or visit www.firstlight-usa.com.

 
BATTERY INSTALLATION

STEP 1. Remove battery tube. Insert two batteries “–” terminals first.

STEP 2. Reinstall battery cap. Hand-tighten until snug.


STEP 3. Ensure batteries are properly installed by pressing any button on the control panel. The red LED “lock” should illuminate indicating the light is in Lockout Mode. If it does not, repeat Steps 1 and 2, ensuring both “+” terminals are facing up.

COMPONENTS

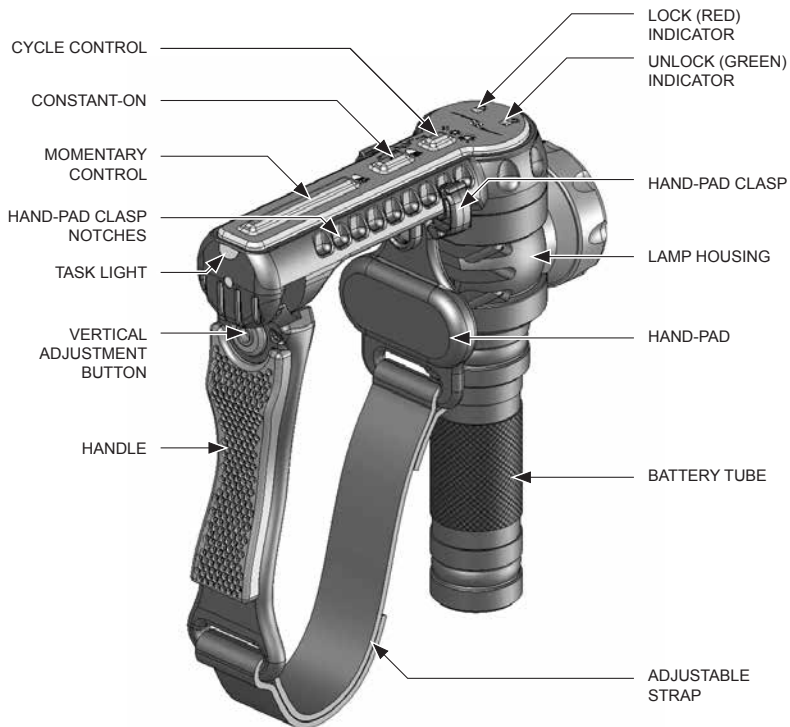

BASIC FUNCTIONS

 Control Panel Diagram

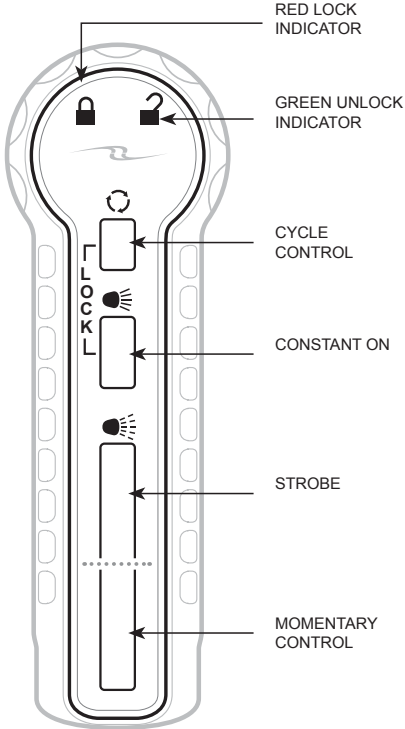

PLACING LIBERATOR IN-HAND

 
Slide Liberator onto hand. The lamp housing should be on outside of hand, pointing forward.



Handle should be positioned in palm of hand as shown.




ADJUSTING FOR FIT

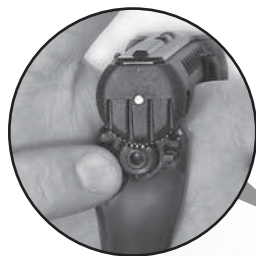

LOCKOUT/READY MODE


Lockout Mode prevents accidental illumination. To unlock the light and enter Ready Mode, press the Constant-On and Cycle Control buttons simultaneously and release. The green “unlock” indicator will illuminate signaling that visible light modes are active.

 To reenter Lockout Mode at any time during use, press and hold the Constant-On and Cycle Control buttons simultaneously for 1 second. The red “lockout” indicator will illuminate.

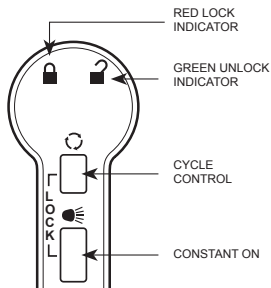

MOMENTARY MODE

 
The Momentary Control button activates the primary white LED at maximum brightness when pressed. When released, the white LED turns off.

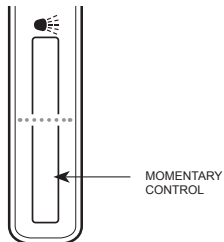

CONSTANT-ON MODE


The Constant-on Control button activates the primary white LED in Constant-On Mode.

 - To turn on the primary white LED from the off position, press and release the Constant-On Control button.
- To turn the light off, press and release the Constant-On Control button.

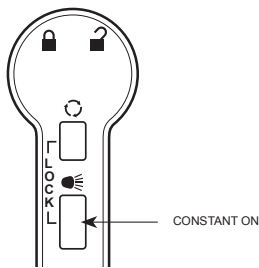

CYCLE CONTROL

 The Cycle Control button is used to adjust the brightness level of the primary white LED while in Constant-On Mode. Press and release the Cycle Control button when the primary LED is illuminated to select one of three brightness levels. The light will default to the last used Constant-On brightness setting.

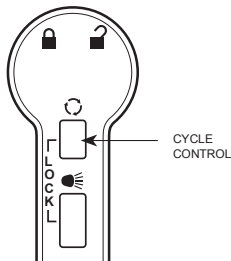

TASK LIGHT

 
The Cycle Control button is also used to activate the Task Light LED. Press and release the Cycle Control button when the primary LED is NOT illuminated to select the Task Light.

STROBE MODE

Activate strobe by pressing the Strobe button. The strobe will activate as long as the Strobe button is pressed.


The Ready Strobe function can be activated **ONLY** as a momentary function and cannot be locked on.

NOTE: Upon exiting Strobe Mode, the light will default to the last used function.

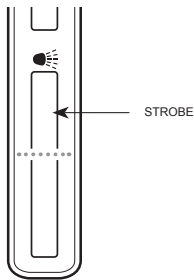

LOW BATTERY

 When the battery nears the end of its useful life the red Lock indicator will begin to flash. Once the useful life of the batteries has been reached the Freehand™ will begin to limit its output in order to extend run time.

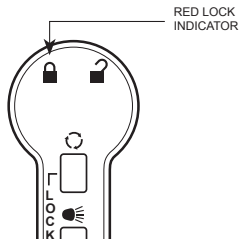

FIRST-LIGHT USA, LLC LIFETIME LIMITED WARRANTY

The PERIOD OF WARRANTY shall be for the lifetime of the lighting device from date of purchase. First-Light USA will repair or replace, free of charge, at First-Light USA's option, any part due to defects in materials or workmanship. Certain countries and jurisdictions restrict limited lifetime warranties. If you reside in one of these countries or jurisdictions, First-Light USA extends to you a 10 year limited warranty, which maintains the following terms and conditions.

First-Light USA, at First-Light USA's option, may refund the purchase price to the original owner if unable to make the product perform the work for which it was designed by repair or replacement of a product of at least equal value. The limited warranty contained herein is the purchaser's exclusive remedy.

THIS WARRANTY EXCLUDES damage or defects caused by neglect, abuse, misuse, alteration, disassembly, improper maintenance or accidents. Batteries, or damaged caused by defective or neglected batteries are excluded from this warranty. Accessory items are also excluded from this warranty. Electronics (other than light emitting diodes (LEDs), are limited to a 3 year warranty with proof of purchase.

To obtain warranty service, call 877.454.4450 or send e-mail to info@firstlight-usa.com.

First-Light USA will then issue a Return Merchandise Authorization (RMA) and instructions on warranty return. The original owner must include the RMA upon returning the product in order to obtain warranty service from First-Light USA.

We will pay to ship the repaired or replaced product to the original owner's address if located within United States. If the original owner's address is located outside of the United States, we will ship the product freight collect.

If we determine the remedy is not covered under this warranty, we will notify you and inform you of service options available on a fee basis.

FIRST-LIGHT USA, LLC MAKES NO OTHER WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED. ALL IMPLIED WARRANTIES, TO INCLUDE BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH EXCEED THE OBLIGATIONS AND TIME LIMITS STATED IN THIS WARRANTY ARE HEREBY DISCLAIMED BY FIRST-LIGHT USA, LLC AND EXCLUDED FROM THIS LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

ALSO EXCLUDED FROM THIS WARRANTY ARE ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING LOSS OF USE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES; EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

FIRST-LIGHT USA, LLC
WARRANTY AND SERVICE DEPARTMENT
205 S. Main Street, Seymour, IL 61875

Phone: 877.454.4450
Fax: 877.454.4420
Email: info@firstlight-usa.com

NOTES

This image shows a blank sheet of white paper with horizontal blue ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

WHEN YOUR LIGHT DEPENDS ON IT.®

www.firstlight-usa.com